




# Side of Pole U-shape Mount

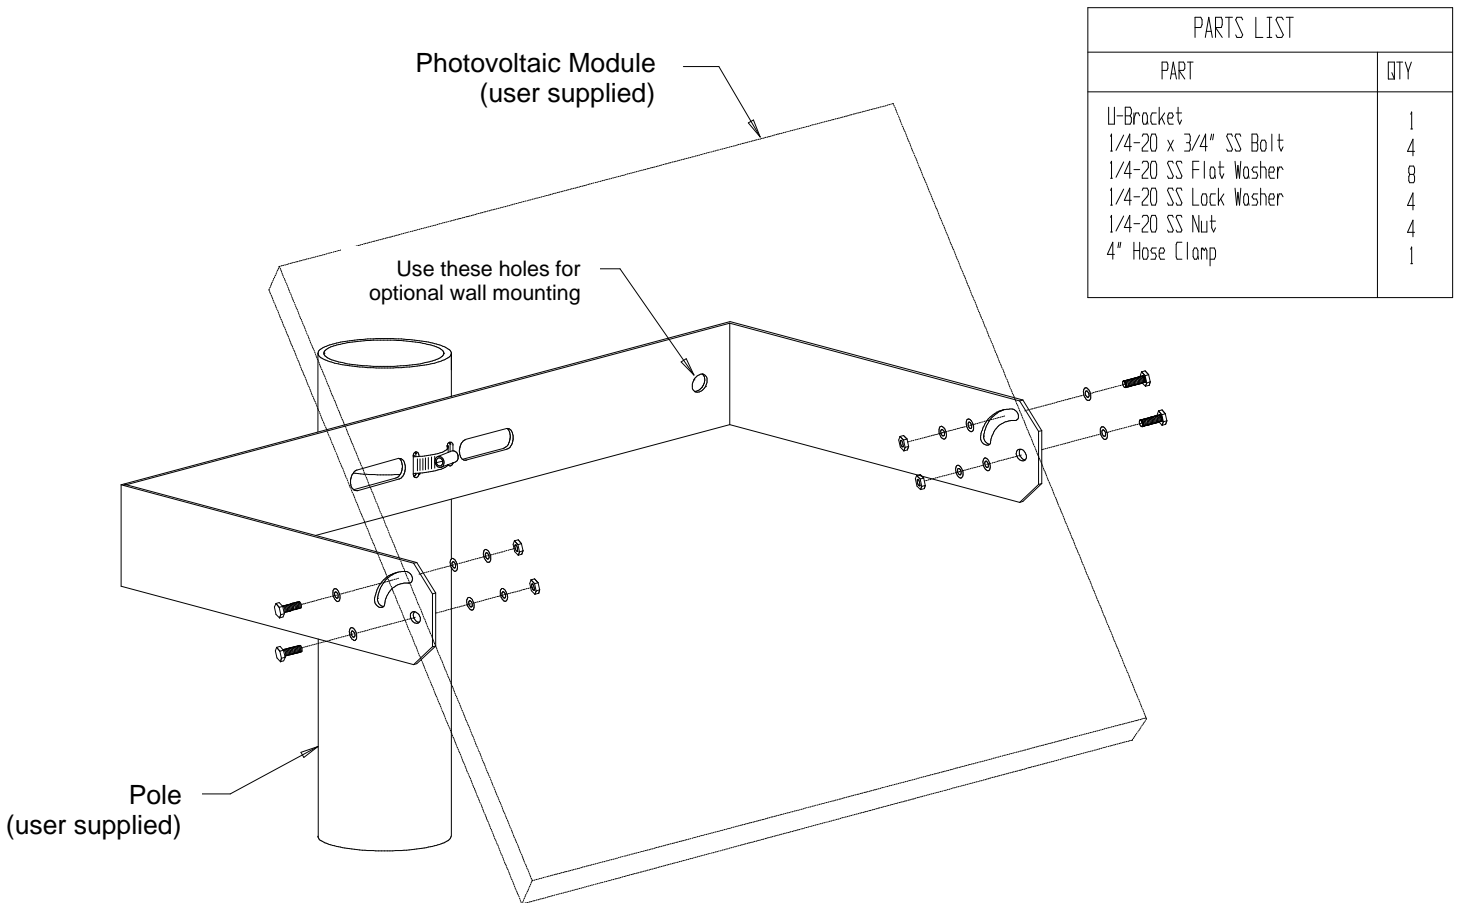

## Installation Steps:

*Read all of the instructions prior to beginning assembly.*

1. Lay the module face down on a protected surface and attach U-bracket with supplied hardware. Finger tighten.
2. Attach U-bracket to pole using 4" Hose Clamp and tighten securely.
3. Adjust the tilt angle to the module manufacturers recommendation.
4. Tighten hardware to the following torque values:
  - a. 1/4-inch hardware to 7 ft-lbs